

# 1910 General Industry Machine Guarding



# Machine Guarding

OSHA 10-Hour Outreach Training General Industry

#### Introduction

#### Possible machinery-related injuries include:

- Crushed fingers or hands
- Amputations
- Burns
- Blindness

#### A good rule to remember is:

Any machine part, function, or process which may cause injury must be safeguarded.



#### Introduction

#### **Lesson Objectives:**

- 1. Identify the main causes of elevator machinery accidents
- Recognize basic machinery parts that expose Elevator Constructors to hazards
- 3. Recognize workplace situations involving machinery that requires guarding
- 4. Identify the requirements for safeguards
- 5. Identify types of machine guards, including types of devices used to safeguard machines



#### **Machinery Accidents**

Examples of how elevator machinery and other conveyances accidents can occur include:

- Reaching in to "clear" equipment
- Not using lockout/tagout
- Unauthorized persons doing maintenance or using the machines
- Missing or loose machine guards









### Elevator and Conveyance Machinery Accidents

#### **Amputations:**

- Unguarded/inadequately safeguarded machinery
- Materials handling activities
- Activities involving stationary machines







#### Three fundamental machine areas:

- 1) Point of operation
- 2) Power transmission device
- 3) Operating controls mechanical or electric power control






Point of operation: where work is performed on material

- Examples:
  - Cutting
  - Shaping
  - Boring
  - Forming
  - Polishing

What are the hazards here?

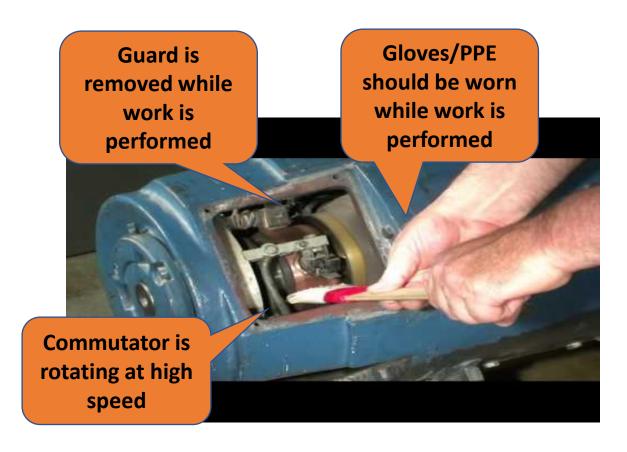



#### Power transmission device:

 Parts that transmit energy to the part of the machine performing work

Examples

Flywheels

Pulleys

• Belts

Connecting rods

Couplings

Cams

Spindles

Chains

Cranks

Gears



#### Hazardous motions and actions:

#### Motions

- How the machine part moves
- Examples: rotating, in-running nip points, reciprocating, and transversing


#### Actions

- Operation that the machine part performs
- Examples: cutting, punching, shearing, bending



# Basic Elevator and Conveyance Machinery Parts and Hazards

Rotating parts with hazardous projections

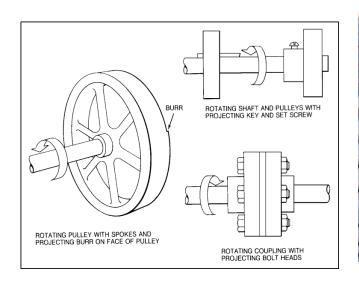








## Basic Elevator Machinery and Conveyances Parts and Hazards

Common nip points on rotating parts

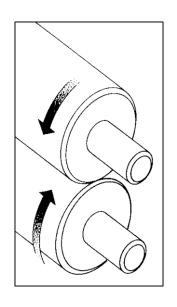

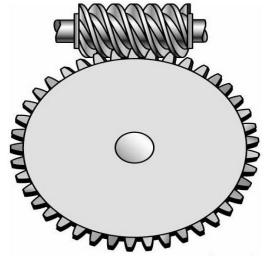

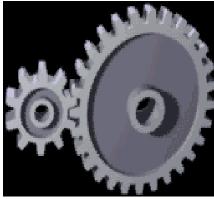




## Basic Elevator Machinery and Conveyance Parts and Hazards

Nip points between rotating elements and parts with longitudinal motions






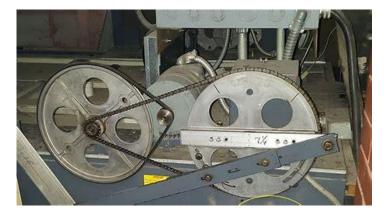

# Basic Elevator and Conveyance Machinery Parts and Hazards

Nip points between rotating machine components



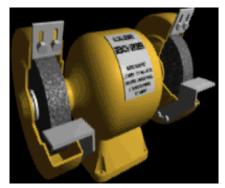







- Reciprocating motions:
  - Back-and-forth
  - Up-and-down



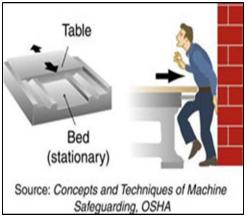

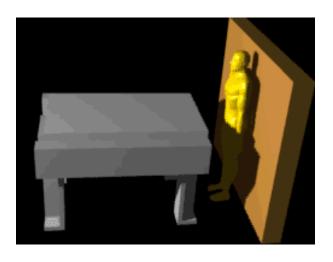




### Basic Elevator and Conveyance Machinery Parts and Hazards

 Transverse motion – movement in straight, continuous line



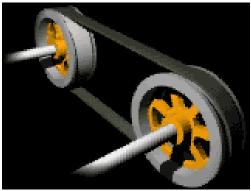




 Cutting action – may involve rotating, reciprocating, or transverse motion






 Punching action – power applied to a slide (ram) for purpose of blanking, drawing, or stamping metal or other materials

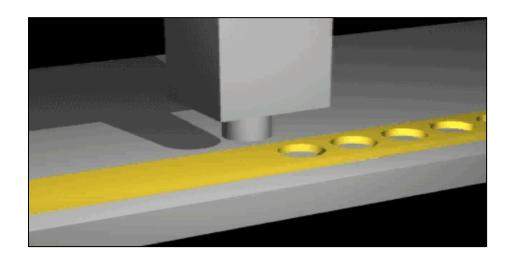




 Shearing action – applying power to a slide or knife in order to trim or shear metal or other materials.

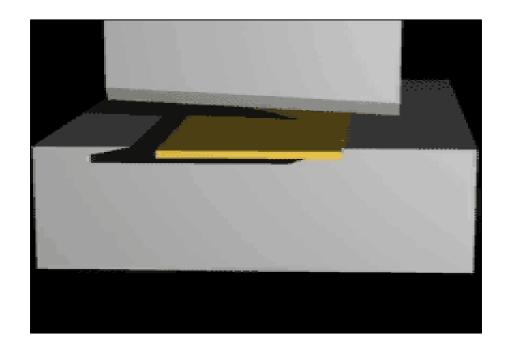




 Bending action – applying power to draw or stamp metal or other materials

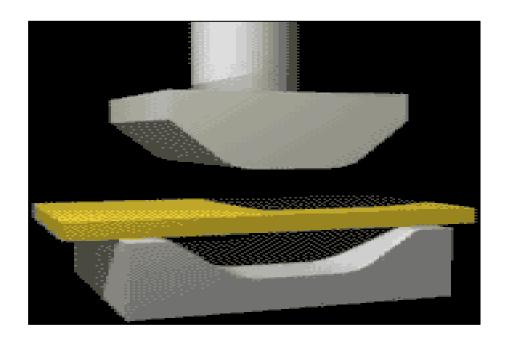




Machines that require point of operation guarding:

- Guillotine cutters
- Shears
- Alligator shears
- Power presses
- Milling machines
- Power saws
- Jointers
- Portable power tools
- Forming rolls and calendars

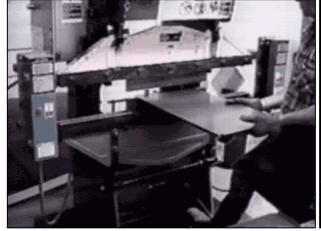


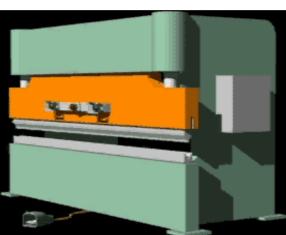



- Exposure of fan blades:
  - Guard when periphery of blades is less than 7' above the floor or working level
  - Guards with openings no larger than ½"



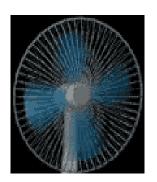







- Abrasive wheel machinery:
  - Adjustable tongue guard to within ¼" of wheel
  - Work rest with maximum opening of 1/8"
  - Cover spindle end, nut, flange projections



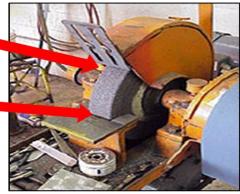





Revolving barrels, containers, and drums:

- Guard by an enclosure which is interlocked with drive mechanism
- Guards with openings no larger than ½"







Power-transmission apparatus:

- Shafting, flywheels, pulleys, belts, chain drives, etc.
- Less than 7 feet from the floor or working platform must be guarded







- Machinery associated with amputations includes:
- 1. Mechanical power presses
- 2. Power press breaks
- 3. Powered and non-powered conveyors
- 4. Printing presses
- 5. Roll-forming and roll-bending machines
- 6. Shearing machines


- 7. Food slicers
- 8. Meat grinders
- 9. Meat-cutting band saws
- 10. Drill presses
- 11. Milling machines
- 12. Grinding Slitters
- 13. G machines



#### Requirements for Safeguards

Safeguards must meet these minimum general requirements:

- Prevent contact
- Be secured
- Protect from falling objects
- Create no new hazards
- Create no interference
- Allow safe lubrication

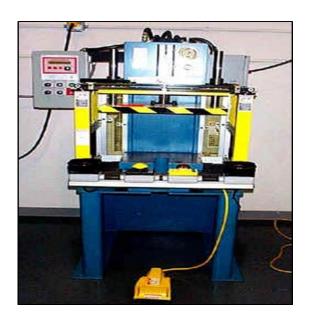



#### Safeguarding machinery:

- Primary methods
  - Guards
  - Devices
- Ensure employee protection
  - Properly designed, constructed, and installed
  - Used and maintained in good operating condition




- Secondary methods
  - Probe detection and safety edge devices
  - Awareness devices
  - Safeguarding methods
    - Safe distance
    - Safe holding
    - Safe opening
  - Safe work practices
- Safe work procedures
- Complementary equipment



#### **Guards:**

- Preferable to other control methods
- Provide physical barrier that prevents contact with dangerous machine parts
- Four general types
  - Fixed
  - Interlocked
  - Adjustable
  - Self-adjusting

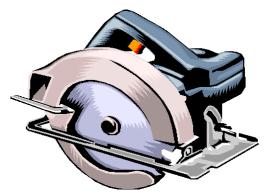



#### Fixed guard:

- Provides a barrier
- Permanent part of the machine, preferable to all other types of guards.








#### Interlocked guards:

- Shuts off or disengages power, stops moving parts, and prevents starting of machine when guard is open
- May use electrical, mechanical, hydraulic, or pneumatic power, or combination



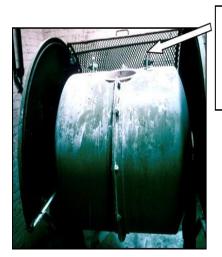


Interlocked guard on revolving drum



#### Adjustable guards:

- Shuts off or disengages power
- Stops moving parts
- Prevents starting of machine when guard is open

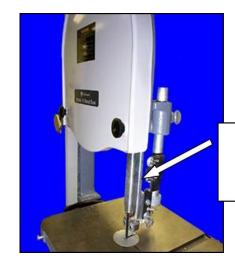


Bandsaw blade adjustable guard



#### Self-adjusting guards:

- Openings of barriers determined by movement of the stock
- Places barrier between danger area and operator

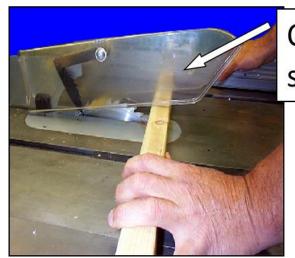

Circular table saw self-adjusting guard



#### **Devices:**

Controls or attachments that prevent inadvertent access by employees to hazardous machine areas

#### Examples:


- Presence sensing
- Photoelectric
- Radiofrequency
- Electromechanical
- Pullback
- Restraint

- Safety trip controls
- Two-hand control
- Two-hand trip
- Gate



#### Presence-sensing devices:

- Photoelectric
- Radiofrequency
- Electromechanical

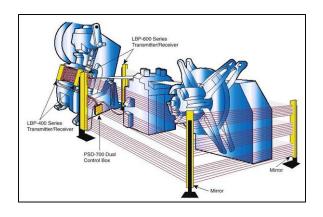





#### Pullback devices:

- Uses a series of cables attached to operator
- Automatically withdraws hands from point of operation when slide/ram begins to descend







- Hands in die, feeding
- Point of operation exposed
- Pullback device attached and properly adjusted



- Die closed
- Hands withdrawn from point of operation by pullback device




#### **Restraint devices:**

- Use cables/straps attached to operator's hands and a fixed point
- No extending/retracting action involved
- Hand-feeding tools may be necessary








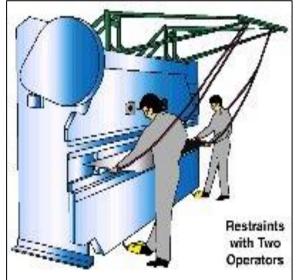

### Safety trip controls:

- Deactivates the machine in an emergency situation
- Examples
  - Pressure-sensitive bar
  - Safety tripod
  - Safety tripwire








#### Two-hand controls:

- Deactivates the machine in an emergency situation
- Pressure-sensitive
- Positioning is critical; must stop machine before body reaches danger area



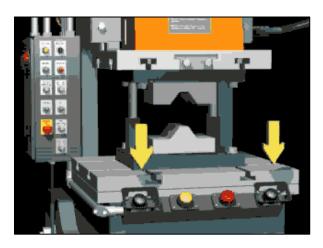




#### Gate devices:

- Moveable barrier that protects operator at point of operation before machine cycle can be started
- Must be interlocked so machine cannot begin cycle unless gate guard is in place
- Must be closed before machine can function
- Types
  - "A" Gate
  - "B" Gate



 Type "A" Gate Operation Operation Type "B" Gate




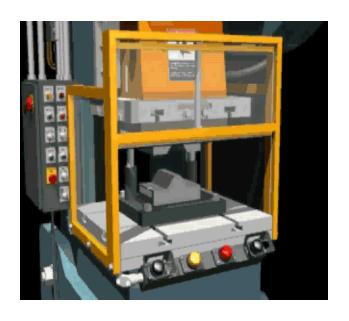



#### Gate devices:

- Moveable barrier that protects operator at point of operation before machine cycle can be started
- Must be interlocked so machine cannot begin cycle unless gate guard is in place
- Must be closed before machine can function

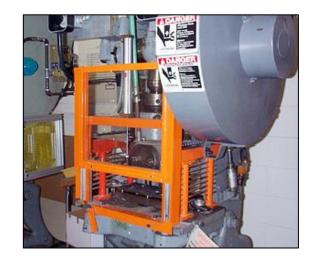




## **Additional Safeguarding**

### Location/distance:

- The dangerous moving part of a machine must be so positioned that those areas are not accessible or do not present a hazard
- Feeding process safeguarded by maintaining safe distance to protect worker
- Operator's controls located safe distance from machine

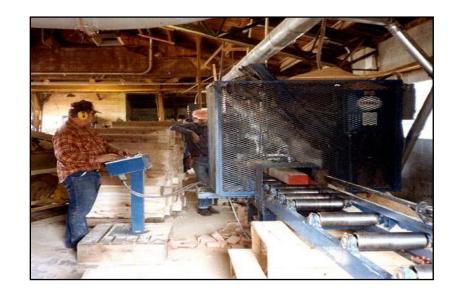




# Additional Safeguarding

### Feeding and ejection methods:

- Automatic/ semi-automatic feed
- Automatic/ semi-automatic ejection
- Robots

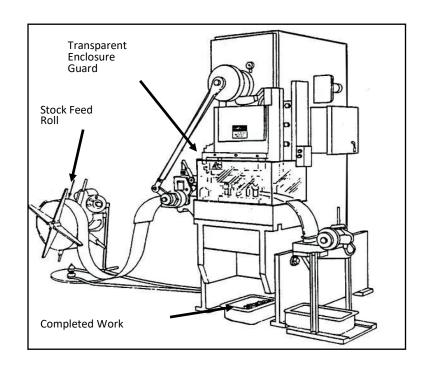




# **Additional Safeguarding**

#### Miscellaneous aids:

- Awareness barriers
- Protective shields
- Hand-feeding tools



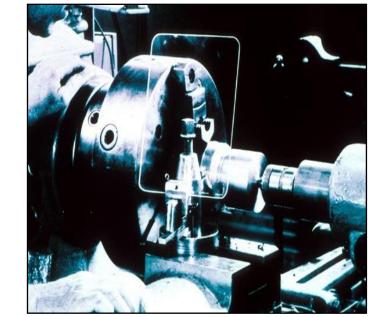



# Identify the Hazard



Unguarded lower blade and arbor end of radial saw



# Identify the Hazard



Guard removed from chain rail exposing pins on the spiked chain and sprocket mechanism



## Summary

- Safeguards are essential for protecting workers from needless and preventable machinery-related injuries
- The point of operation, as well as all parts of the machine that move while the machine is working, must be safeguarded
- A good rule to remember is:
   Any machine part, function, or process which may cause injury must be safeguarded



- 1. All machines consist of three fundamental areas, including \_\_\_.
  - a. Flywheels, connecting rods, and transverse moving parts
  - b. Point of operation, power transmission device, and operating controls
  - c. Reciprocating parts, rotating parts, and on/off switch
  - d. Feed mechanisms, auxiliary machine parts, and nip points
- Answer: b. Point of operation, power transmission device, and operating controls



- 2. Rotating, in-running nip points, reciprocating, and transversing are types of hazardous \_\_\_\_.
  - a. Motions
  - b. Actions
  - c. Guards
  - d. Devices

**Answer: a. Motions** 



- 3. Cutting, punching, shearing, and bending are types of hazardous \_\_\_\_.
  - a. Motions
  - b. Actions
  - c. Guards
  - d. Devices

**Answer: b. Actions** 



- 4. Which of the following explains how a guard protects workers?
  - a. Stops the machine when a worker enters the danger area
  - b. Restrains the worker from entering the danger area
  - c. Creates distance to keep the worker from entering the danger area
  - d. Provides a barrier to prevent access to the danger area



Answer: d. Provides a barrier to prevent access to the danger area

- 5. Which of the following is an example of a safeguarding device?
  - a. Protective shield
  - b. Hand-feeding tool
  - c. Safety trip control
  - d. Awareness barrier

**Answer: c. Safety trip control** 



Through the Alliance between OSHA's 10 Regional Offices and the Elevator Contractors of America (ECA), Elevator Industry Work Preservation Fund (EIWPF), International Union of Elevator Constructors (IUEC), National Association of Elevator Contractors (NAEC), National Elevator Industry Educational Program (NEIEP), and National Elevator Industry Inc. (NEII), collectively known as The Elevator Industry Safety Partners, developed this Machine Guarding Hazard Industry Specific Training for informational purposes only. It does not necessarily reflect the official views of OSHA or the U.S. Department of Labor. May 2021

Under the Occupational Safety and Health Act, employers are responsible (<a href="http://www.osha.gov/as/opa/worker/employer-responsibility.html">http://www.osha.gov/as/opa/worker/employer-responsibility.html</a>) for providing a safe and healthy workplace and workers have rights (<a href="https://www.osha.gov/workers">https://www.osha.gov/workers</a>). OSHA can help answer questions or concerns from employers and workers. OSHA's On-Site Consultation Program (<a href="https://www.osha.gov/consultation">https://www.osha.gov/consultation</a>) offers free and confidential advice to small and medium-sized businesses, with priority given to high-hazard worksites. For more information, contact your regional or area OSHA office (<a href="https://www.osha.gov/contactus/bystate">https://www.osha.gov/contactus/bystate</a>), call 1-800-321-OSHA (6742), or visit <a href="https://www.osha.gov/">https://www.osha.gov/</a>.



### Machine Guarding

- OSHA 10-Hour Outreach Training
- General Industry

# Thank You!



